





L4D funnel—top lid plug not closing completely

- Issue: Lid plug not sealing properly on top of funnel, causing heat loss.
- Cause: Funnel cup (round cover on the bottom of the funnel) is not seated properly causing top cover to push lip cap up too far.
- Remedy: This is a simple procedure that takes less than one minute. Remove funnel handle, lid plug and top cover, then push up on funnel cup so it is seated properly and then reassemble funnel.




 Remove handle by squeezing ends together to clear holder.



2. Remove lid plug by pulling up from the oven clasp on one end.



3. Separate top cover from base and funnel cup by pulling apart.

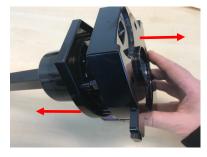

4. Push up funnel cup to make sure it is seated properly onto funnel.



5. Squeeze together two parts, it should make a slight clicking noise.



6. Reassemble funnel in the reverse order as shown in instructions, gap should be eliminated now.

